



## **Maintenance and Operation Manual: MG100 Movable Acoustic Wall**

### **Introduction**

Following the installation of the MG100 Movable Acoustic Wall, it's important to ensure everything aligns with your expectations and order. This section provides guidance on post-installation checks, panel operation, and maintenance.

### **Post-Installation Checklist**

**Verification:** After the wall installation, verify with the installer that the setup matches your specifications and order details.

**Documentation:** Any discrepancies or concerns should be noted in the presence of the installer. Ensure these points are officially documented on the sign-off sheet for accountability.

**Components:** The installation includes the track system, wall jambs, basic panels, and a telescopic panel. Optionally, door panels or a communication panel may be integrated as part of the wall system.

**Handling Tool:** A detachable handle is provided for the locking and unlocking mechanism of the panels. The operation hole is located on the edge of basic panels and the face of the telescopic panel for easy access.

### **Panel Operation and Handling**

**Single Point Panels:** These panels are centrally hung. Extra caution is required when moving them to prevent any damage to the ceiling or floor coverings. When maneuvering these panels, ensure movements are gentle and calculated.

## **Two Point Suspension Panels**

**Handling:** Remove panels from the storage area individually. When navigating through track junctions, it's advisable to hold the panel with both hands at shoulder height for better control. In straight track sections, panels may be moved with one hand, but ensure stability and control at all times.

### **Maintenance and Care**

**Regular Checks:** Periodically inspect the track, panel alignment, and locking mechanisms to ensure smooth operation and to prevent any potential damage.

**Cleaning:** Keep the track and panels free from dust and debris. Use a soft, dry cloth for cleaning surfaces to maintain the appearance and functionality of the wall.

**Professional Maintenance:** For any repairs or adjustments, consult with a professional service provider to ensure the integrity and safety of the wall system.

### **Troubleshooting and Contact Information**

In case of operational issues, verify panel insertion and key switch position first. Check the power supply indicator on the fused spur and control box. For assistance, contact our servicing and repairs team at 01932 918 338. or email [sales@modernslide.co.uk](mailto:sales@modernslide.co.uk)  
Providing detailed information about the problem will facilitate faster service.

### **Conclusion**

The MG100 Single Point Movable Acoustic Wall is designed for flexibility and ease of use while offering excellent acoustic performance. Proper care, handling, and maintenance are key to maximizing the lifespan and functionality of your movable wall system. Always adhere to the guidelines provided for a seamless and efficient operation.

