



OPERATING & MAINTENANCE MANUAL

Description of Operation Type MG700

Setting Out:

Initiating Panel Movement:

Begin by removing a panel from the stacking area.

Engaging the Shoot Bolt:

Use your hand to press down on the shoot bolt via the latch, ensuring it locates correctly into the socket on the floor.

Securing with the Location Bolt:

Similarly, press down on the location bolt at the end of the panel to secure it in place.

Panel Alignment:

Align the next panel using only the location bolts. Progressively align each panel until the door panel is reached. Note: Space is limited when positioning panels.

Door Panel Positioning:

Rotate the door panel from the stacking area into place, utilizing the shoot bolt for accurate location. A ball latch on the leading edge aids in securing the panel in its closed position.

Stacking Position:

Releasing the Door Panel:

Release the shoot bolt on the door panel by applying hand pressure to the latch's end, which will disengage the bolts on the adjacent panel for stacking.

Sequential Panel Release:

Continue releasing each panel by applying pressure to the latch end as described above, and stack them accordingly.

Final Panel Release:

Release the shoot bolt on the last panel using the same method to disengage its bolts, then stack as demonstrated.

Key Schedules**Servicing:**

ModernGlide's Operable Walls are designed for longevity with proper care and maintenance. A thorough service is recommended annually or based on usage, to identify and prevent potential costly repairs.

Standard Service Includes:

Cleaning and lubrication of track and roller systems.
Inspection and possible replacement of rollers (at additional cost).
Operational check of all panels.
Panel adjustment for re-leveling.
Inspection of acoustic seals and internal mechanisms.
Profile inspection.
Comprehensive service reporting.
Full guarantee on all service work.

Service contracts are available upon request (See Page 8 for Service Details).

Maintenance & Cleaning**Surface Finishes:****Aluminium Profiles:**

For soft marks, use a cream cleaner gently. Anodised surfaces, resistant to scratches, can be cleaned effectively. General cleaning of top and bottom tracks with a damp cloth is recommended.

Glass:

Use a standard glass cleaner for tempered safety or laminate glass. For glass with manifestations, consult the responsible contractor.

Tracks, Rollers, and Mechanisms:

Maintenance frequency depends on use. Contact ModernGlide Ltd for guidance.

Servicing

Service contracts are obtainable through ModernGlide Ltd.

Contact Information:

Phone: 01932 918338

Email: sales@modernglide.co.uk

Website: www.modernglide.co.uk

For additional requirements, contact the Servicing Department using the above details.

Guarantees and Warranties

ModernGlide guarantees their products against defects for the first 12 months, addressing any issues within this period at no extra cost to the client. Damages or faults from misuse or incorrect operation are not covered under this guarantee. Post-warranty, we offer an Extended Maintenance and Service Agreement, ensuring top-notch service with genuine components by our expertly trained engineers. For further information or to discuss your requirements, please contact us.

